
Serial interface to monitor LiPo charger.

Barnaby Shearer

Jun 09, 2022

CONTENTS:

1	Installation	3
2	imax_b8_serial	5
3	Indices and tables	7
	Python Module Index	9
	Index	11

Serial interface to monitor LiPo charger.

INSTALLATION

```
python3 -m pip install imax-b8-serial
```


IMAX_B8_SERIAL

Monitor Imax B8 over serial.

```
usage: imax_b8_serial SERIAL_PORT
```

Serial interface to monitor LiPo charger.

class `imax_b8_serial.Packet`

Communication packet.

class `imax_b8_serial.Settings`

Settings.

`imax_b8_serial.read`(*ser*: *Serial*) → *Iterator*[*Packet*]

Read packets from serial interface.

INDICES AND TABLES

- genindex
- modindex
- search

PYTHON MODULE INDEX

i

imax_b8_serial, 5

INDEX

I

`imax_b8_serial`
module, 5

M

module
 `imax_b8_serial`, 5

P

`Packet` (*class in imax_b8_serial*), 5

R

`read()` (*in module imax_b8_serial*), 5

S

`Settings` (*class in imax_b8_serial*), 5